

Windows 8

Windows 8 installation steps:

- A:** Desktop tile highlighted in the Start screen.
- B:** Speaker icon in the taskbar highlighted with a red box.
- C:** "Recording Devices" highlighted in the "Open Volume Mixer" window.
- D:** "Microphone" selected in the "Sound" window's "Recording" tab.
- E:** "Levels" tab highlighted in the "Microphone Properties" window.

Windows 7/Vista

Windows 7/Vista installation steps:

- A:** Speaker icon in the taskbar highlighted with a red box.
- B:** "Recording Devices" highlighted in the "Open Volume Mixer" window.
- C:** "Microphone" selected in the "Sound" window's "Recording" tab.
- D:** "OK" button highlighted in the "Microphone Properties" window.

Frequently Asked Questions
<http://www.trust.com/17405/faq>

© 2015 Trust International B.V. - All rights reserved
 Laan van Barcelona 600
 3317DD, Dordrecht, NL



WEBCAM


for PC & laptop

PRIMO




Quick Installation Guide

1. Connect webcam

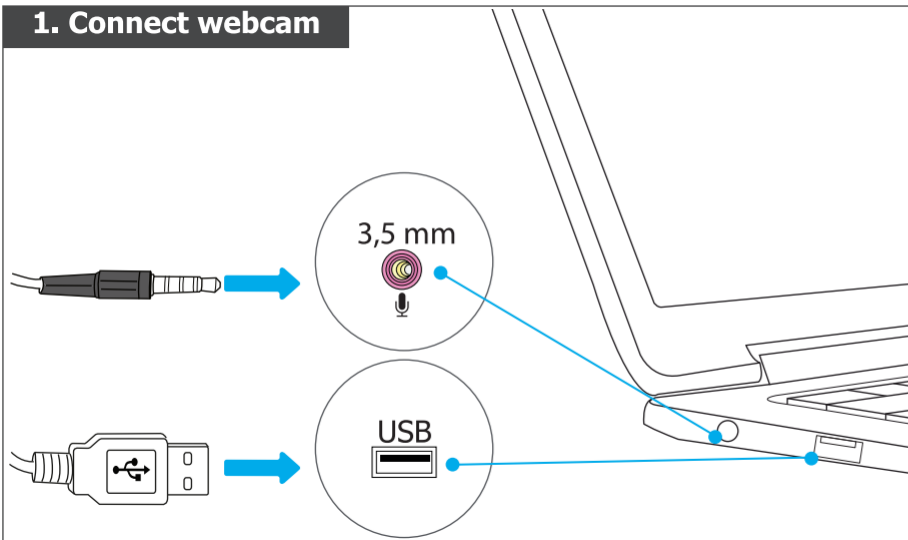

2. Focus

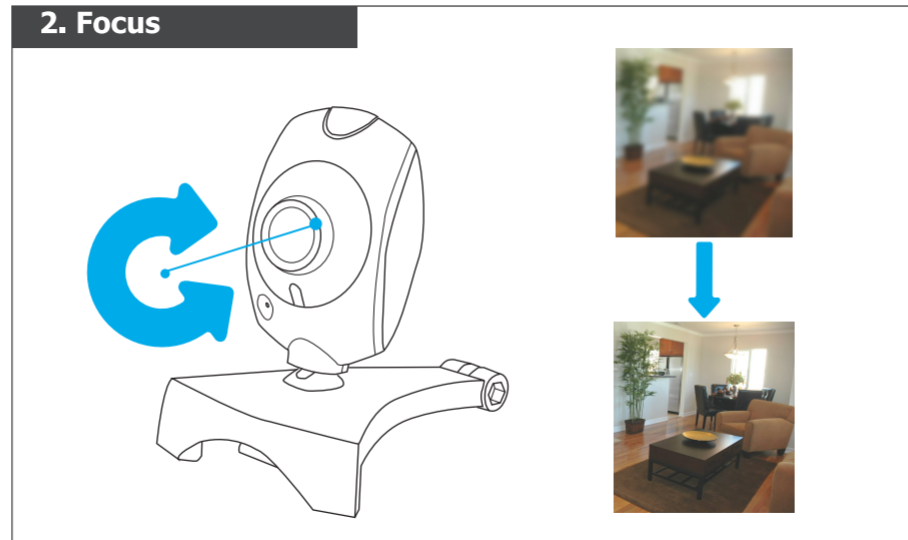

Windows 10

This section shows four screenshots of Windows 10 settings for microphone configuration, labeled A, B, C, and D with pill icons below them:

- A:** A screenshot of the Windows taskbar showing the system tray. The microphone icon is highlighted with a red box.
- B:** A screenshot of the context menu for the microphone icon. The "Recording Devices" option is highlighted with a red box.
- C:** A screenshot of the "Sound" control panel window. The "Recording" tab is selected, and the "Microphone" device is highlighted with a red box. A blue arrow points from the microphone icon in the previous screenshot to this one.
- D:** A screenshot of the "Microphone Properties" dialog box. The "Levels" tab is selected, and the "OK" button is highlighted with a red box. A blue arrow points from the "Microphone Boost" slider in the previous screenshot to this one.